


CO₂ Meter

Model CO250

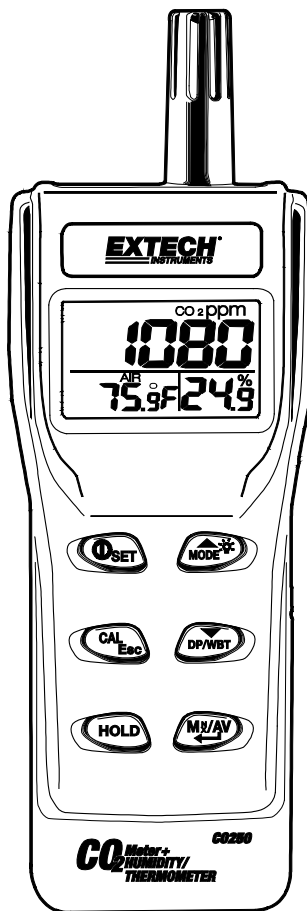

Introduction

Congratulations on your purchase of this Model CO250 Meter. This meter measures CO₂ (Carbon Dioxide) levels, air temperature, dew point, wet bulb temperature and humidity and is an ideal instrument for indoor air quality (IAQ) diagnosis. This meter is shipped fully tested and calibrated and, with proper use, will provide years of reliable service.


Meter Description

METER

1. Temperature and Humidity sensor
2. CO₂ sensor (rear)
3. LCD display
4. AC Adaptor connector
5. RS232 port
6. Keypad
7. Battery compartment (rear)

LCD DISPLAY

1. CO₂ concentration in ppm
2. Relative Humidity in %
3. Air Temperature, Dew Point or Wet Bulb Temperature

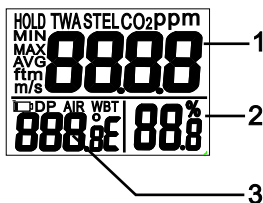


SYMBOLS

TWA	Time weighted average (8 hours)
STEL	Short-term exposure limit (15 minutes weighted average)
HOLD	Freezes current reading on display
MIN/MAX	Minimum/Maximum readings
	Low battery indicator
DP	Dew point temperature
AIR	Air temperature
WBT	Wet bulb temperature
%	Unit of relative humidity
C or F	Celsius/Fahrenheit

KEYPAD


- Turns the meter on and off.
- Enters setup mode.
- Sets as non-sleep mode with .
- Exits setup page/mode.
- Enters CO₂ calibration with .
- Enters RH calibration with .
- Freezes the current reading on display.
- Cancels data hold function.
- Activates or cancels the backlight.
- Selects unit or increases value in setup.
- Selects AIR, DP, WBT temps display.
- Selects unit or decreases value in setup.
- Activates MIN, MAX, STEL, TWA function.
- Saves and finishes settings.

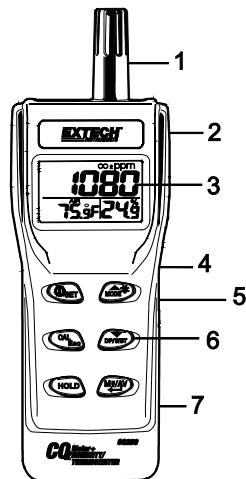

Operation

BATTERY INSTALLATION

 The meter is powered by 4 AA batteries or a DC adaptor. Install the batteries into the rear battery compartment observing correct polarity. When an adaptor is used, the batteries will be disconnected from the meter. The adaptor cannot be used as a battery charger. When the battery voltage drops below the required level,  and "Lob" will appear on the display, a beeper sounds and readings are no longer displayed. (Press any key but the **SET** to stop the beeps). Replace the batteries to resume normal operation.



Never dispose of used batteries or rechargeable batteries in household waste. As consumers, users are legally required to take used batteries to appropriate collection sites, the retail store where the batteries were purchased, or wherever batteries are sold. Disposal: Do not dispose of this instrument in household waste. The user is obligated to take end-of-life devices to a designated collection point for the disposal of electrical and electronic equipment.

POWER ON/OFF

Press **SET** to turn the meter on and off. At power up, the meter emits a short beep and performs a 30 second countdown for meter warm up. It then enters the normal operation mode with current CO₂, temperature and humidity readings displayed.



TAKING MEASUREMENT

The meter starts measurements when powered on and updates readings every second. If the operating environment changes (ex. from high to low temp.), it takes 30 seconds for CO₂ sensor to respond and 30 minutes for RH.

NOTE: Do not hold the meter close to your mouth or any other source of CO₂.

AIR, DP and WBT Measurements

Press the **DP/WBT** button to switch temperatures display. The lower left display will cycle from "AIR" air temperature, "DP" dew point temperature and "WBT" wet bulb temperature.

DATA HOLD

Press the **HOLD** button to freeze the readings, the "HOLD" icon is displayed on the left top of the display. All current readings are held unchanged, except STEL and TWA. Press "HOLD" again to cancel the hold function.

BACKLIGHT

Press the **MODE/▲**  button for more than 1 second to activate or to cancel backlight function.

MIN,MAX,STEL,TWA

In the normal mode, press the **Max/AV** button to see the minimum, maximum, and weighted average readings. With each press of the **Max/AV** button, the meter displays MIN, MAX, STEL, TWA in sequence and then returns to the normal mode.

 
In MIN and MAX modes, the meter shows the minimum and maximum readings of CO₂ (main display), AIR, DP or WB temperatures (lower left display) and Humidity (lower right display).

In STEL and TWA modes, the main display shows the weighted average of CO₂ readings for the past 15 minutes (STEL) or 8 hours(TWA). The lower displays are the current measurements



NOTE:

1. If the meter has been powered on for less than 15 minutes, the STEL value will be the weighted average of readings taken since power on. As well, the TWA mode will display a weighted average of readings prior to 8 hours of operation.
2. The CO250 takes at least 5 minutes to calculate STEL and TWA. The display shows "----" during the first 5 minutes from power on.



3. The STEL and TWA values will keep updating every 5 minutes.

ALARM

The meter features an audible alarm to give warnings when CO₂ concentration exceeds the set limit.. It emits beeps (Abt.80dB) when CO₂ level goes over the set value and stops when any key (except **SET**) is pressed or the readings fall below the set value. It beeps again if the value exceeds the limit. Restart the meter if the beeper will not stop.

AUTO POWER OFF

The meter turns off automatically after 20 minutes of inactivity. To override the function, press and hold down the **SET** and **HOLD** buttons until "n" appears in the display (approx. 2 seconds) while turning on the meter on. NOTE: Auto sleep function will be disabled during calibration mode.

SETUP (alarm limit and temperature scale)

In the normal mode press and hold the **○SET** button for more than 1 sec to enter the setup mode. To exit the setup mode, press the **CAL/Esc** button when either P1.0 or P3.0 is displayed.

P1.0 CO2 ALARM Limit

When entering setup mode, P1.0 and “AL” are displayed.
Press the **Mn/AV** button to scroll to P1.1 for setting CO2 alarm threshold. The current CO2 set value will be blinking.



Press the **MODE/▲** button to increase or the **DP/WBT/▼** button to decrease the value. Each press adjusts 100 ppm. The alarm range is from 100 to 9900ppm. When the preferred alarm value is set, press the **Mn/AV** button to exit and save the setting or the **CAL/Esc** button to exit without saving and return to P1.0.

P3.0 TEMPERATURE SCALE

Press the **MODE/▲** button or the **DP/WBT/▼** button in P1.0 to access P3.0 for setting the temperature scale.
Press the **Mn/AV** button to go into P3.1 for setting the temperature units. The currently selected units (°C or °F) will be blinking in the display. To switch units, press the **MODE/▲** button. Press the **Mn/AV** button to save the setting or press the **CAL/Esc** button exit without saving and return to P3.0.



Calibration


CO₂ CALIBRATION

The meter is calibrated to a standard 400ppm CO₂ concentration at the factory

NOTE: When the accuracy becomes a concern or after a year of use, return to Extech for a standard calibration.

CAUTION: Do not calibrate the meter in an atmosphere of unknown CO₂ concentration.

1. Place the meter in the 400ppm calibration chamber. Turn the meter on and hold down the **CAL/Esc** and **MODE/▲** buttons simultaneously to enter CO₂ calibration mode. 400ppm and “CAL” will blink on the LCD while performing calibration.
2. Wait about 5 minutes until the blinking stops. The calibration is then completed and the meter automatically returns to the normal mode.

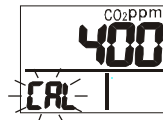

NOTE: Ensure the batteries are fresh prior to calibration to prevent an interruption or failed calibration.

RH CALIBRATION

The meter is calibrated to a standard 33% and 75% salt solution bottle.

CAUTION: Do not calibrate the humidity without the default calibration salt. Otherwise, permanent damage could occur. Contact the Extech for calibration salts or services.

33% calibration

1. Plug the sensor probe into 33% salt bottle.
2. In the normal mode, Press and Hold the **CAL/Esc** and **DP/WBT/▼** buttons to enter the 33% calibration. “CAL” and calibrating value (32.7% if at 25°C) will blink on the LCD with current temperature at the left.
3. The meter is now calibrating, and will finish in about 60 minutes when “CAL” and humidity stop blinking.



75% calibration

1. After the 33% calibration, plug the sensor probe into a 75% salt bottle.
2. Press the **Mn/AV** button to enter 75% calibration.
3. “CAL” and calibrating value (75.2% if at 25°C) will blinking on the LCD with current temperature at the left.
4. The meter is now calibrating. Wait about 60 minutes until the blinking stops, then calibration is completed and the meter will return to normal mode.



NOTE: Single point calibrations are allowed. To calibrate 33% only, press **CAL/Esc** and exit when 33% calibration is completed. To calibrate 75% only, press **MODE/▲** within the 5 minutes while initializing 33% calibration.

PC CONNECTION

The meter is equipped with an RS-232 PC interface jack (3.5mm phono) for connection to a PC. The supplied cable and Windows™ compatible software allows the user to store readings in a text file and display real-time measurements in a series of selectable formats. For more information or specific operating instructions, refer to the User Guide included with the software.

Specifications

Function	Range	Resolution	Accuracy
CO ₂	0 to 5000ppm	1ppm	±(5% rdg +50ppm)
	5000 to 9999ppm	1ppm	Not specified
	Pressure dependence: +1.6% reading per kPa deviation from normal pressure, 100kPa		
Temperature	-10 to 60°C 14 to 140°F	0.1°	±0.6°C/0.9°F
Humidity	0.0 to 99.9%	0.1%	±3%(10 to 90%) ±5%(< or > 10 to 90%)
Wet Bulb	-5 to 60°C 23 to 140°F	0.1°	Calculated from RH and Temperature
Dew Point	-20 to 60°C -4 to 140°F	0.1°	

Display	Triple LCD with backlight
Sensor Type	CO ₂ : NDIR (non-dispersive infrared) technology Humidity: Capacitance sensor; Temperature (air): Thermistor
Operating Conditions	32 to 122°F (0 to 50°C); < 95% RH non-condensing
Storage Conditions	-4 to 140°F (-20 to 60°C); <99% RH non-condensing
Power Supply	4 x 1.5V 'AA' batteries or AC adaptor (9V/1A)
Battery Life	approx. 24 hours (alkaline batteries)
Dimensions / Weight	7.9x2.7x2.3"/(200x70x57mm)/ 6.7 oz (190g)

Maintenance

CLEANING AND STORAGE

1. The meter should be cleaned with a damp cloth and mild detergent when necessary. Do not use solvents or abrasives.
2. Store the meter in an area with moderate temperature and humidity (refer to the operating and storage range in the specifications chart earlier in this manual).

TROUBLESHOOTING

Can't power on

Press **ONSET** for more than 0.3 seconds and try again. Check that the batteries have good contact and the correct polarity or that the AC adaptor is properly connected.

Slow response

Check whether the air flow channels on the rear of the meter are blocked.

Error messages

E01: CO2 sensor damaged.

E02: The value is under range.

E03: The value is over range.

E04: The original data error results in this error (DP, WB)

E07: Too low voltage to measure CO2, replace batteries or use an adaptor.

E11: Retry humidity calibration.

E17: Retry CO2 calibration.

E31: Temperature sensor damaged.

E34: Humidity sensor damaged.

CO2 Levels and Guidelines

Non-Enforced Reference levels:

- 250 - 350 ppm – background (normal) outdoor air level
- 350- 1,000 ppm - typical level found in occupied spaces with good air exchange.
- 1,000 – 2,000 ppm - level associated with complaints of drowsiness and poor air.
- 2,000 – 5,000 ppm – level associated with headaches, sleepiness, and stagnant, stale, stuffy air. Poor concentration, loss of attention, increased heart rate and slight nausea may also be present.
- >5,000 ppm – Exposure may lead to serious oxygen deprivation resulting in permanent brain damage, coma and even death.

Regulatory exposure limits:

ASHRAE Standard 62-1989: 1000ppm: CO2 concentration in occupied building should not exceed 1000ppm.

OSHA: 5000ppm: Time weighted average over five 8-hour work days should not exceed 5000ppm

Building bulletin 101 (Bb101): 1500ppm. UK standards for schools say that CO2 at averaged over the whole day(i.e. 9am to 3.30 pm) should not exceed 1500ppm.

Germany, Japan, Australia, UK...: 5000ppm, 8 hours weighted average in occupational exposure limit is 5000ppm.

Warranty

FLIR Systems, Inc. warrants this Extech Instruments brand device to be free of defects in parts and workmanship for one year from date of shipment (a six month limited warranty applies to sensors and cables). If it should become necessary to return the instrument for service during or beyond the warranty period, contact the Customer Service Department for authorization. Visit the website www.extech.com for contact information. A Return Authorization (RA) number must be issued before any product is returned. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. FLIR Systems, Inc. specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. FLIR's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.

Calibration, Repair, and Customer Care Services

FLIR Systems, Inc. offers repair and calibration services for the Extech Instruments products we sell. NIST certification for most products is also provided. Call the Customer Service Department for information on calibration services available for this product. Annual calibrations should be performed to verify meter performance and accuracy. Technical support and general customer service is also provided, refer to the contact information provided below.

Support Lines: U.S. (877) 239-8324; International: +1 (603) 324-7800

Technical Support: Option 3; E-mail: support@extech.com

Repair & Returns: Option 4; E-mail: repair@extech.com

Product specifications are subject to change without notice

Please visit our website for the most up-to-date information

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

ISO 9001 Certified

Copyright © 2013-2017 FLIR Systems, Inc.

All rights reserved including the right of reproduction in whole or in part in any form

www.extech.com

Garantie

FLIR Systems, Inc. garantit que cet appareil Extech Instruments est exempt de défauts matériaux et de fabrication pendant un an à partir de la date d'envoi (une garantie limitée de six mois s'applique aux capteurs et aux câbles). Si le renvoi de l'appareil pour réparation devient nécessaire durant ou après la période de garantie, contactez le service client pour autorisation. Pour obtenir les coordonnées, visitez le site Web suivant : www.extech.com. Un numéro d'autorisation de retour (AR) doit être délivré avant tout retour de produit. L'expéditeur prend à sa charge les frais d'expédition, le fret, l'assurance et l'emballage correct de l'appareil afin de prévenir toute détérioration durant le transport. Cette garantie ne s'applique pas aux dommages imputables à l'utilisateur, tels que l'usage impropre ou abusif, un mauvais câblage, une utilisation non conforme aux spécifications, un entretien ou une réparation incorrecte, ou toute modification non autorisée. FLIR Systems, Inc. déclinera spécifiquement toute garantie ou qualité marchande ou aptitude à l'emploi prévu, et ne sera en aucun cas tenu responsable pour tout dommage conséquent, direct, indirect ou accidentel. La responsabilité totale de FLIR est limitée à la réparation ou au remplacement du produit. La garantie définie ci-dessus est inclusive et aucune autre garantie, écrite ou orale, n'est exprimée ou implicite.

Calibrage, réparation et services après-vente

FLIR Systems, Inc. offre des services de calibrage et de réparation pour les produits Extech Instruments que nous commercialisons. Nous fournissons également une certification NIST pour la plupart des produits. Contactez notre service client pour toute information sur les services de calibrage disponibles pour ce produit. Un calibrage doit être effectué chaque année pour vérifier les performances et la précision du mètre. Nous offrons également une assistance technique et un service à la clientèle. Veuillez vous reporter aux coordonnées fournies ci-dessous.

Lignes d'assistance: États-Unis (877) 239-8324; international: +1 (603) 324-7800

Service d'assistance technique : Option 3 ; E-mail : support@extech.com

Réparations et retours : Option 4 ; E-mail : repair@extech.com

Les spécifications produit sont sujettes à modifications sans préavis.

Pour les toutes dernières informations, veuillez visiter notre site Web.

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Certifié ISO 9001

Copyright © 2013-2017 FLIR Systems, Inc.

Tous droits réservés, y compris la reproduction partielle ou totale sous quelque forme que ce soit.

www.extech.com

Garantía

FLIR Systems, Inc., garantiza este dispositivo marca Extech Instruments para estar libre de defectos en partes o mano de obra durante un año a partir de la fecha de embarque (se aplica una garantía limitada de seis meses para cables y sensores). Si fuera necesario regresar el instrumento para servicio durante o después del periodo de garantía, llame al Departamento de Servicio a Clientes para obtener autorización. Visite www.extech.com para Información de contacto. Se debe expedir un número de Autorización de Devolución (AD) antes de regresar cualquier producto. El remitente es responsable de los gastos de embarque, flete, seguro y empaque apropiado para prevenir daños en tránsito. Esta garantía no se aplica a defectos resultantes de las acciones del usuario como el mal uso, alambrado equivocado, operación fuera de las especificaciones, mantenimiento o reparación inadecuada o modificación no autorizada. FLIR Systems, Inc., rechaza específicamente cualesquier garantías implícitas o factibilidad de comercialización o idoneidad para cualquier propósito determinado y no será responsable por cualesquier daños directos, indirectos, incidentales o consecuentes. La responsabilidad total de FLIR está limitada a la reparación o reemplazo del producto. La garantía precedente es inclusiva y no hay otra garantía ya sea escrita u oral, expresa o implícita.

Servicios de calibración, reparación y atención a clientes

FLIR Systems, Inc., ofrece servicios de reparación y calibración para los productos que vendemos de Extech Instruments. Además ofrecemos certificación NIST para la mayoría de los productos. Llame al Departamento de Servicio al Cliente para solicitar información de calibración para este producto. Para verificar el funcionamiento y precisión se debe realizar la calibración anual. Además se provee Soporte Técnico y servicios generales al cliente, consulte la información de contacto en seguida.

Líneas de soporte: EE.UU. (877) 239-8324; Internacional: +1 (603) 324-7800

Soporte Técnico Opción 3; correo electrónico: support@extech.com

Reparación / Devoluciones: Opción 4; correo electrónico: repair@extech.com

Las especificaciones del producto están sujetas a cambios sin aviso

Por favor visite nuestra página en Internet para la información más actualizada

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Certificado ISO 9001

Copyright © 2013-2017 FLIR Systems, Inc.

Reservados todos los derechos, incluyendo el derecho de reproducción total o parcial en cualquier medio

www.extech.com