


EXTECH[®]

USER MANUAL

Laser Distance Meter

MODELS DT40M, DT60M, and DT100M

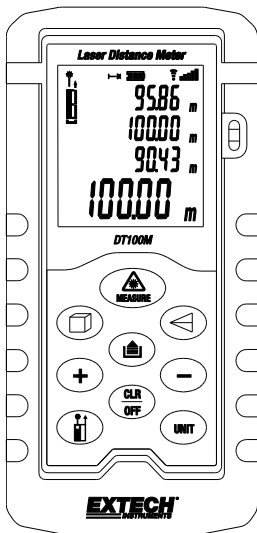

Contents

Introduction	3
Safety Instructions	3
Descriptions	4
Measurement Preparation	6
Programming Menu	8
Distance Measurements	8
Area Measurements	11
Volume Measurements	12
Indirect Measurements (Pythagorean)	14
20-point Datalogger	17
Maintenance	17
Display Error Codes	19
Specifications	19
Two-year Warranty	21

Introduction

Thank you for selecting the Extech Laser Distance Meter. This meter measures distance up to 131.2' (40m) for DT40M, 197' (60m) for DT60M, or 328.1' (100m) for DT100M and calculates Area, Volume, and Indirect readings using the Pythagorean Theorem ($a^2+b^2=c^2$). It also includes a laser pointer. Please visit www.extech.com for the latest version of this User Guide, Product Updates, and Customer Support.

Safety Instructions

This meter has been designed for safe use, but must be operated with caution.

Laser classification (Class 2)

The meter produces a visible Class 2 laser beam from the top of the instrument.



COMPLIES WITH 21 CFR 1040.10 AND 1040.11 EXCEPT FOR DEVIATIONS PURSUANT TO LASER NOTICE NO. 50 DATED JUNE 24, 2007.

WARNING: Do not directly view or point the laser at an eye. Do not look directly into the beam using an optical aid such as binoculars. This can create a hazard. Low power visible lasers do not normally present a hazard, but may present some potential for hazard if viewed directly for extended periods of time.

- Please read all safety instructions carefully before using this instrument
- Do not use this device in flammable or explosive environments
- Do not use this device near aircraft or medical equipment
- Do not use this device near strong electro-magnetic interference
- Do not aim the meter directly into sunlight
- Do not dis-assemble or modify the instrument
- Do not store in areas of high temperature/humidity


- Remove the batteries when storing the instrument for long periods

Descriptions

Meter


- LCD display area
- Keypad
- Level
- Laser Pointer
- Sensor Beam

Note: Battery compartment on back of meter

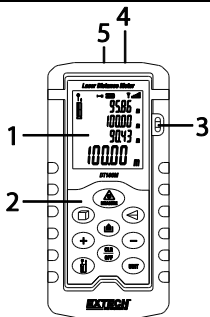



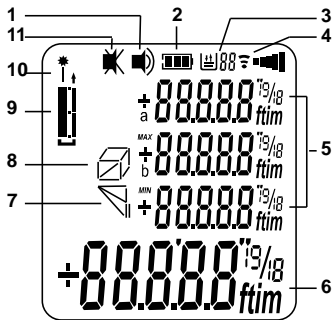


Display Description

- Beeper on
- Battery status
- Stored Data indicator
- Signal strength indicators
- Secondary display area
- Main Display area
- Indirect measurement mode
- Area/Volume measurement mode
- Edge Reference (from top or bottom of meter)
- Laser emission mode
- Beeper off



Keypad Description

 <p>MEASURE</p>	<p>Long press: Power ON Short press: Laser ON (can be set to default ON) Short press: Single distance measurement Long press: Continuous measurement mode</p>
	<p>Short press: Datalogger mode (press CLR to exit) Long press: Open program menu</p>
<p>CLR OFF</p>	<p>Short press: Clear display; Long press: Power OFF</p>
	<p>Short press: Area/Volume mode</p>
	<p>Indirect measurements Press 1x: Single Pythagorean mode Press 2x: Double Pythagorean mode Press 3x: Double Pythagorean (partial height)</p>
<p>+ _</p>	<p>Add / Subtract keys</p>
	<p>Short press: Measurement edge selection Long press: Backlight ON/OFF</p>
<p>UNIT</p>	<p>Short press: Select unit of measure</p>

Measurement Preparation

Measurement Considerations

1. For best results, choose a target that is flat, hard and smooth
2. Use a section of cardboard or similar material if the target size needs to be increased
3. For distance measurements, this device performs best indoors. If used outdoors, the range will be limited depending on intensity of light and other environmental factors.
4. Replace the battery if the battery icon flashes on the display
5. The meter will not measure through glass, liquid, or Styrofoam
6. Inaccurate measurements may result from low battery, measured distance exceeding specified range, and irregular shaped objects near the target.

Range considerations



The range is limited to 131.2' (40m), 197' (60m), or 328.1' (100m) depending on model. At night or dusk, if the target is in shadow, the measuring range without target plate is increased. Use a target plate to increase the range during daylight or if the target has poor reflection properties. In unfavorable conditions such as intense sunlight, poor reflective surfaces, or high temperatures, distance readings over 33' (10m) can increase by $\pm 0.0018\text{in/ft.}$ ($\pm 0.15\text{mm/m}$).

Target surfaces


Measurement errors can occur when measuring toward colorless liquids (e.g. water), dust free glass, Styrofoam or similar semi-

permeable surfaces. Aiming at high gloss surfaces may deflect the laser beam and lead to measurement errors. For non-reflective and dark surfaces, the measuring time may increase.

Preparing for Measurements




1. Long press the MEAS key to switch the meter ON.
2. You can elect either to have the Laser always ON or to have the laser turn ON only when the MEAS key is pressed. Go to the Programming Menu section of this manual for details.
3. The unit automatically switches OFF after eight (8) minutes of inactivity. Long press CLR to switch the unit OFF manually.
4. Press CLR to cancel the last action performed or clear the last data displayed on the screen.
5. Press UNIT to change the unit of measure (ft = feet, in = inches, m = meters).
6. Long press  to turn the backlight on or off.
7. Short press the reference key  to select the top edge or bottom edge reference. See diagram below.

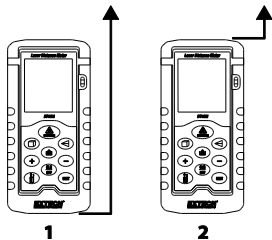- In the Top mode (2), the displayed reading will represent the distance from the top of the meter to the target.
- In the Bottom mode (1), the displayed reading will represent the distance from the bottom of the meter to the target. This is the default mode.



Programming Menu

1. Long press MEAS until it shows “boot” to open the programming menu
2. Long press MEAS to step through the options
3. Short press MEAS to make changes
4. Short press CLR to exit the menu
5. See table below for the program options

1		For distance measurements: Set Laser to default ON/OFF. Short press MEAS key to select.
2	ON:  OFF: 	For all other measurements: Set Laser to default ON/OFF. Short press MEAS key to select.
3	CAL. 0	Short press MEAS key to offset display by $\pm 0.3''$ ($\pm 7\text{mm}$)
4	bP. on/oFF	Short press MEAS key to set beeper default ON/OFF
5	bL. On/oFF	Short press MEAS key to set backlight default ON/OFF
6	-----	Unused mode

Distance Measurements

Single Distance Measurements


1. Long press the MEASURE key to switch the meter ON; Dashes (- - -) will appear on the display.
2. If the Laser point is already ON, go directly to step 3 below. If the Laser point is not ON, press MEASURE to switch it ON.

3. Aim the meter and short press MEASURE to take a reading.
4. You can elect either to have the Laser always ON or to turn ON only when MEASURE is pressed. Go to the Programming Menu section of this manual for details.
5. The reading will remain on the display until it is cleared with the CLR key (short press) or until the meter is powered OFF.

Continuous Distance Measurements (with MAX-MIN)

This mode of operation is useful for determining the shortest and longest distances from a given point. The meter can be moved to various targets while the primary display (bottom) updates with each new measurement. The MIN and MAX values are displayed dynamically in auxiliary displays above the primary display.

1. Long press the MEASURE key to switch the meter ON.
2. Press and hold MEASURE for 3 seconds to begin a continuous measurement session. The laser pointer will stay ON in continuous mode.
3. The meter will beep with each new automatic measurement update (approx. every one half second).
4. The MIN reading will be indicated (example below, left) and will update each time a lower reading (< displayed MIN reading) is encountered.
5. The MAX reading (example below, right) will be indicated and will update each time a higher reading is encountered.

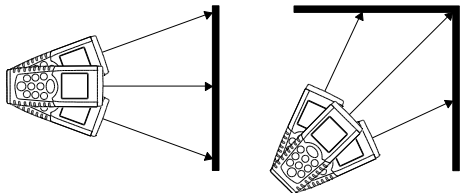

6. The actual reading will be indicated on the primary display.
7. To stop measuring, short press MEASURE. Use the CLR key to delete measurement displays.
8. Note that the meter exits to the normal mode of operation after approx. 100 measurements in continuous mode.

Adding / Subtracting Distance Measurements

To display the sum or difference of two distance measurements:




1. Long press the MEASURE key to switch the meter ON. Press MEASURE to turn Laser ON, if it is not already ON.
2. Press MEASURE to take the first reading. The reading appears on the primary display line (bottom).
3. Press the plus (+) or minus (-) key. The first reading will move to auxiliary display line 2.
4. The plus or minus sign will appear on auxiliary display line 3.
5. Press MEASURE to turn Laser ON, if it is not already ON.
6. Press MEASURE to take the second reading. The second reading appears on auxiliary display line 3.
7. Read the sum or difference of the two readings on the primary display line.

8. Press CLR to cancel the last step or press MEASURE to move the result (now shown in the primary display) to auxiliary display line 2, for additional adding/subtracting work.
9. Press CLR to exit this mode or turn the meter OFF.

Area Measurements

Area Calculations

Computing the area of a room:

1. Long press the MEASURE key to turn the meter ON.
2. Press the  key firmly once.
3. A parallelogram will appear with its length side flashing  indicating that a Length measurement is to be taken.
4. Press MEASURE to turn Laser ON, if it is not already ON.
5. Aim the meter and press MEASURE to take the room length measurement.
6. The parallelogram will now appear with its Width side flashing  indicating that a Width measurement is to be taken.
7. Press MEASURE to turn Laser ON, if it is not already ON.
8. Press MEASURE to take the room width measurement.
9. Auxiliary display lines 1 and 2 will now show the Length and Width. The primary display will show the Area (in ft² or m²).

Note that the laser pointer will switch off automatically if too much time is taken between steps. Press MEASURE to switch the Laser pointer back ON and then try the test again.




Adding/Subtracting Area Calculations


1. After completing an Area calculation (see previous section), with the results displayed, short press the (+) key for the 'summing' mode or the (-) key for the 'difference' mode.
2. Perform another Area calculation as explained in the previous section.
3. Press MEASURE and the display will show the change (increased or decreased Area) from the first to the second Area calculation in the primary display line (bottom). Auxiliary displays will show the two individual Area calculations.

Volume Measurements

Volume Calculations

Compute room Volume:

1. Long press the MEASURE key to switch the meter ON.
2. Press the  key firmly twice.
3. A cube shape will appear with its Length flashing  indicating that a Length measurement is to be taken.
4. Press MEASURE to turn Laser ON, if it is not already ON.
5. Press MEASURE to take the room Length measurement.
6. The cube's Width will now be flashing  indicating that a Width measurement is to be taken.
7. Press MEASURE to turn Laser ON, if it is not already ON.

8. Press MEASURE again to take the room Width measurement.
9. The cube's Height side will now be flashing indicating that a Height measurement is to be taken.
10. Press MEASURE to turn Laser ON, if it is not already ON.
11. Press MEASURE to take the room Height measurement .
12. Auxiliary display lines 1, 2, and 3 will now show the Length, Width, and Height respectively. The primary display (bottom) shows the Volume in cubic feet or meters (ft³ or m³).


Adding/Subtracting Volume Calculations


1. After completing a Volume calculation (see previous section), with the results displayed, short press the (+) key for the 'summing' mode or the (-) key for the 'difference' mode.
2. Perform another Volume calculation as explained in the previous section.
3. Press MEASURE and the display will show the change (increased or decreased Volume) from the first to the second Volume calculation in the primary display line (bottom). Auxiliary displays will show the two individual Volume calculations.

Indirect Measurements (Pythagorean)

Single Pythagorean Calculation (2 Measurements)


This device can measure the vertical height from Point 1 to Point 2 with the operator taking two measurements (Point X to 1 and then Point X to 2).

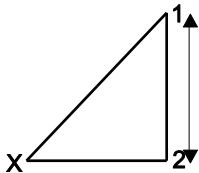

1. Long press the MEASURE key to switch the meter ON.
2. Press  once.
3. A right triangle shape will appear with its diagonal line flashing.
4. Press MEASURE to turn Laser ON, if it is not already ON.
5. From exactly Point X, aim the instrument at Point 1 and press MEASURE. One reading is now complete and the bottom line of the right triangle will begin flashing.
6. Press MEASURE to turn Laser ON, if it is not already ON.
7. From Point X, align the meter as horizontal as possible and aim for Point 2 and then press MEASURE.
8. The measurements are now complete. The primary display line (bottom) indicates the vertical distance from Point 1 to Point 2. Auxiliary lines 1 and 2 show the two separate measurements.


Double Pythagorean Calculation (3 Measurements)


This device can measure height “d” in two segments by taking three measurements. The operator stands at Point X. The first measurement is line “a”.




The second measurement is a horizontal line “b”. The third measurement is line “c”.

1. Long press the MEASURE key to switch the meter ON.

2. Press the  key two times.

3. The double triangle icon  will appear with its top diagonal line flashing.

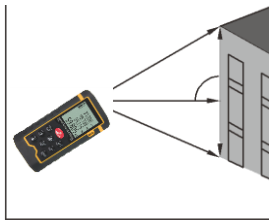




4. Press MEASURE to turn Laser ON, if it is not already ON.
5. From Point X, measure line “a”. Point the instrument at the top of the item and press MEASURE. One reading is now complete and the middle line of the double triangle will begin flashing.
6. Press MEASURE to turn Laser ON, if it is not already ON.
7. From Point X, measure line “b”. Point the instrument horizontally at the item and press MEASURE. The second reading is now complete and the bottom diagonal line of the double triangle will begin flashing.
8. Press MEASURE to turn Laser ON, if it is not already ON.

- From Point X, measure line “c”. Point the instrument at the bottom of the item and press MEASURE. The third measurement is now complete.
- The distance “d” will now be indicated on the bottom primary display line. Auxiliary display lines 1, 2, and 3 will show the individual measurements.

Indirect Measurement Mode 3 (Partial Height)

This device can measure height “d” by taking three measurements. The first measurement is line “a”. The second measurement is line “b”. The third measurement is a horizontal line “c”.

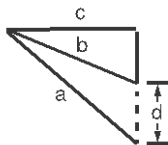


- Press  three times and the  icon will display.
- Press MEASURE to turn Laser ON, if it is not already ON.
- Press MEASURE to measure line “a”.
- Press MEASURE to turn Laser ON, if it is not already ON.
- Press MEASURE to measure line “b”.
- Press MEASURE to turn Laser ON, if it is not already ON.
- Press MEASURE to measure the horizontal line “c”.
- The measurement values for the three sides are shown in the first, second, and third auxiliary displays. If the measurement result conforms to the requirements of the Pythagorean Theorem, the calculated height (“d”) will be displayed in the primary display (bottom); otherwise an error message will appear.

Notes: Ensure that the measurements are made from the same point. Ensure that the right-angle measurement (line c) is made perpendicular to the measured surface.

20-point Datalogger

This device stores up to twenty (20) readings in memory.

1. Take a reading as previously described. The reading will automatically be stored in memory location 20.
2. Take another reading, the reading that was stored in memory location 20, previously, will move down to location 19 and the new reading will be stored in location 20.
3. To view stored readings, press  to enter the datalogger mode and use +/- keys to scroll. The memory location number appears at the top of the LCD and the readings appear in the usual primary and auxiliary display lines.
4. When scrolling through readings, note that the beeper tone is different for 'top' edge reference readings and 'bottom' edge reference readings.
5. When all twenty locations have been filled the meter begins overwriting the existing readings (starting at location 20)
6. Press the CLR key to exit this mode.

Maintenance

WARNING: Do not operate the meter until the battery compartment cover is in place and fastened securely.

This instrument is designed to provide years of dependable service, if the following care instructions are performed:

1. **Keep the meter dry and free from dust.**

2. **Use and store the meter in nominal temperature conditions.**
Temperature extremes can shorten the life of the electronic parts and distort or melt plastic parts.
3. **Handle the meter carefully and avoid shock and vibration.**
Dropping the meter may damage the electronic parts or the case. Handle as you would a camera or telescope.

Cleaning

1. Do not immerse the instrument in water.
2. Wipe the case occasionally with a damp cloth. DO NOT use chemicals, cleaning solvents, abrasives, or detergents. Clean and maintain the instrument lenses in the same manner as for professional camera lenses with high quality lens wipes.

Battery Installation/Replacement

When the low battery symbol appears on the display or when the display does not switch ON, replace the batteries.

1. Power OFF before replacing the batteries.
2. Open the rear battery compartment.
3. Replace the two (2) 'AAA' batteries observing correct polarity.
4. Replace the battery compartment cover.

Battery Safety

- Use only fresh batteries of the correct type. Remove old or weak batteries so they do not leak and damage the unit.
- If the meter is to be stored for long periods, the batteries should be stored separately to prevent damage to the unit.
- Never dispose of batteries in a fire. Batteries may explode or leak.
- Never mix battery types. Always install new batteries of the same type.

Display Error Codes

For any error, cycle power to see if the error clears. If the error persists after several power cycles, refer to the information below.

Display	Reason	Action required
Er. dE	Calculation error	Re-test
Er. SL	Weak signal reception Measurement time-out	Use target plate
Er. HF	Hardware failure	Return for service

Specifications

General Specifications

Display	5-digit (99999) backlit, multifunction LCD
Laser diode	Class 2 red laser (wavelength: 635nm)
Battery	Two (2) 'AAA' alkaline batteries
Battery Life	5,000 measurements (approx.)
Backlight APO	After 15 seconds
Laser APO	After 15 seconds
Meter APO	After 45 seconds
IP Rating	IP54
Operating conditions	32 to 104°F (0 to 40°C)
Storage conditions	-4 to 140°F (-20 to 60°C)
Dimensions	4.6 x 2.2 x 1.3 in. (116 x 56 x 32mm)
Weight	3.5 oz. (100g)

Technical Specifications

Distance ranges	DT40M: 2 in. ~ 131.2 ft. (0.05 ~ 40m) DT60M: 2 in. ~ 197.0 ft. (0.05 ~ 60m) DT100M: 2 in. ~ 328.1 ft. (0.05 ~ 100m)		
Area calculation range	999.99 sq. ft. (999.99m ²)		
Volume calculation range	999.99 cu. ft. (999.99m ³)		
Resolution	Distance	Area	Volume
	0.0 in.	0.00 ft ²	0.00ft ³
	0.000m	0.000m ²	0.000m ³
	0.00ft	0.00ft ²	0.00ft ³
Accuracy	± 0.08 in. (±2mm)		
Measurement update rate	0.3 ~ 3 secs. depending on target reflectivity		

Two-year Warranty

*Teledyne FLIR LLC warrants this Extech brand instrument to be free of defects in parts and workmanship for **two years** from date of shipment (a six-month limited warranty applies to sensors and cables). To view the full warranty text please visit: <http://www.extech.com/support/warranties>.*

Calibration and Repair Services

Teledyne FLIR LLC offers calibration and repair services for the Extech brand products we sell. We offer NIST traceable calibration for most of our products. Contact us for information on calibration and repair availability, refer to the contact information below. Annual calibrations should be performed to verify meter performance and accuracy. Product specifications are subject to change without notice. Please visit our website for the most up-to-date product information: www.extech.com.

Contact Customer Support

Customer Support Telephone List:

<https://support.flir.com/contact>

Calibration, Repair, and Returns: repair@extech.com

Technical Support: <https://support.flir.com>

Copyright © 2021 Teledyne FLIR LLC

All rights reserved including the right of reproduction in whole or in part
in any form

www.extech.com